



# SA4221 "Behind-the-Grille" Mount Siren Speaker for the 2006 Chevy Impala

## Installation Procedure



It is recommended that these instructions be completely read through first and referred to when performing maintenance and/or reinstallation of this product.


**FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS AND INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT OR VEHICLE AND/OR SERIOUS INJURY.**

1) Open the hood and remove the Driver side headlight assembly by removing the bolt (near the driver side fender) and the inboard headlight retaining tab (white).


Driver side Headlight Assembly



2) Pull the headlight assembly forward, until it is loose from its normal position and gently lay the headlight assembly in the engine compartment. It is not necessary to disconnect the headlight wiring.

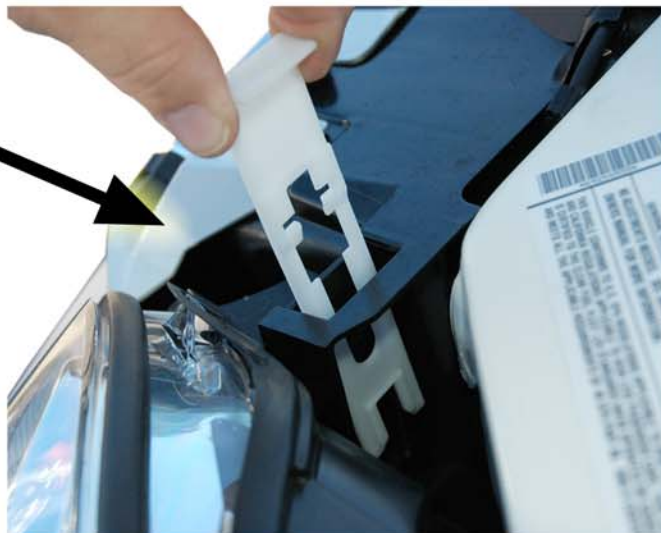


Driver side

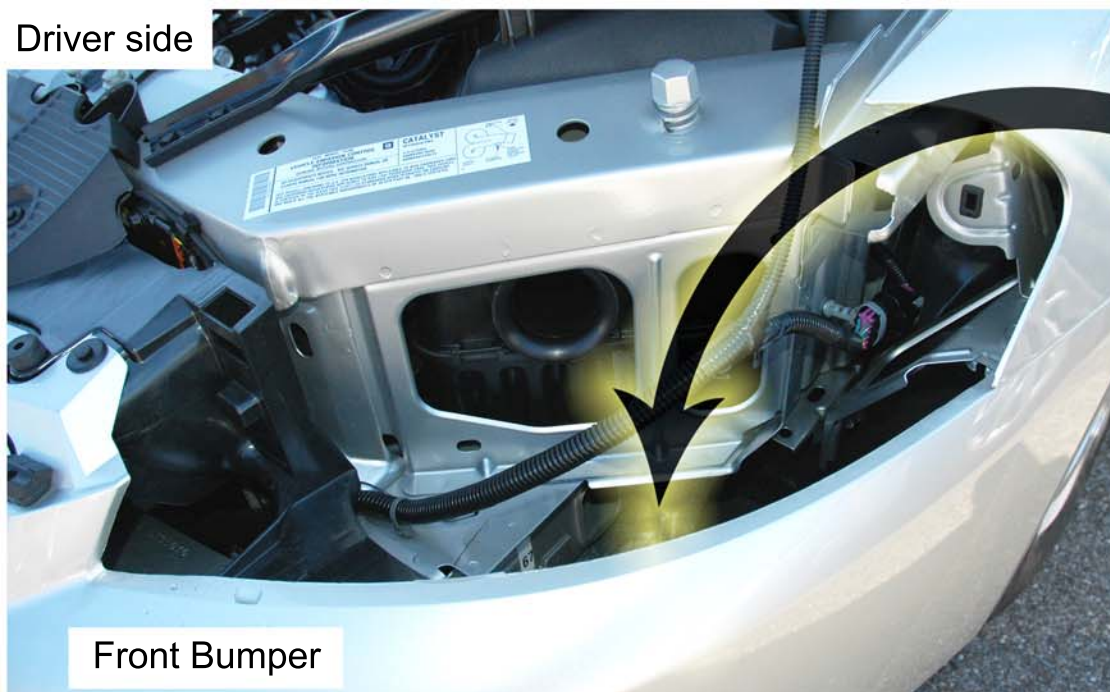


3) Take the speaker assembly and insert the assembly into the "opening" located behind the front, driver side bumper. Put into position as shown in the bottom, right-hand picture. The speaker will point forward when in proper position.

4) Mark the center of the three hole located on the top of the speaker assembly support bracket. Drill clearance holes for the 5/16" bolts and hardware (provided).

Hardware included

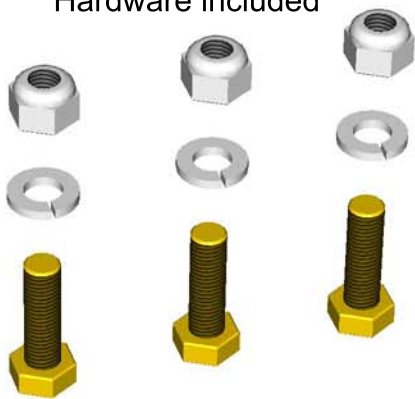

Bracket Mounting Holes x3

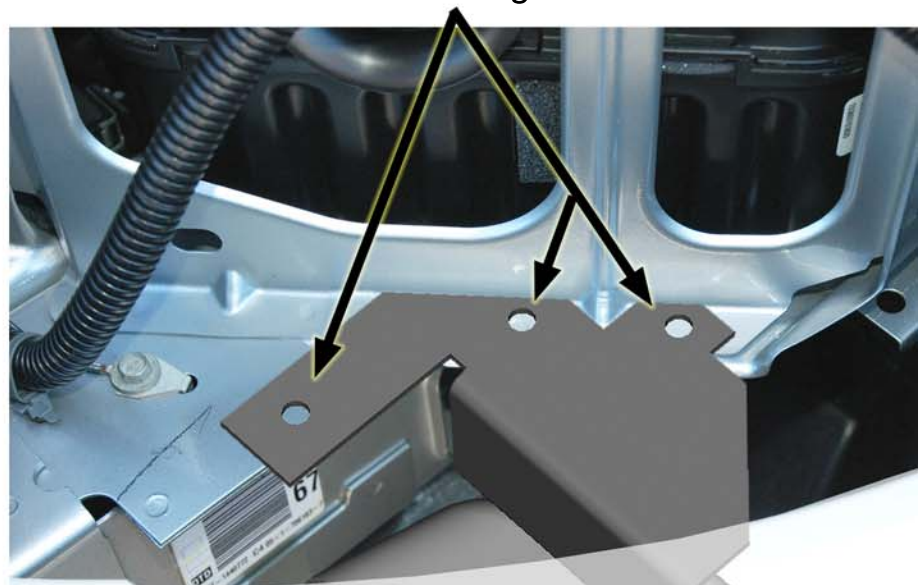

Front Bumper (shown transparent)

5) Install the 5/16-18 x 1.25 Bolts, lock-washers and nylon lock nuts. Tighten all bolts.

6) Continue with the electrical connections as per their manufacturers guidelines. Make sure to include a regular maintenance check for all connections, mounting bolts and speaker assembly.

7) Re-install the driver side Headlight Assembly.