




Light Bar Brackets

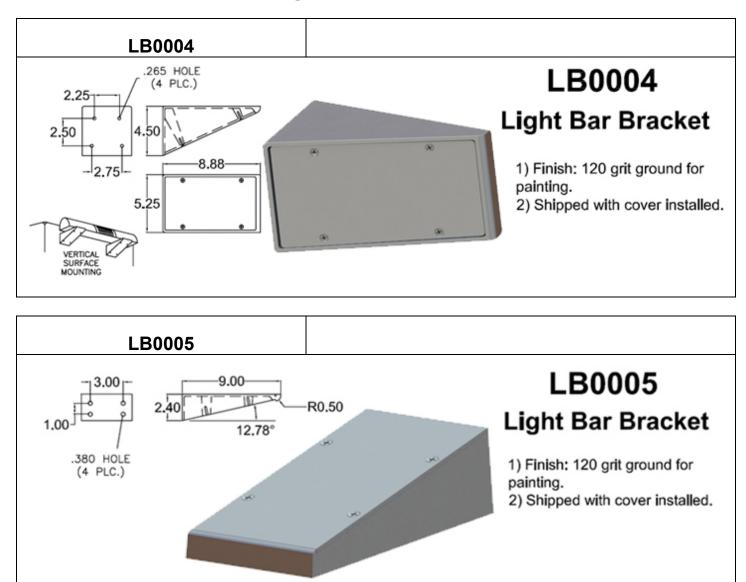


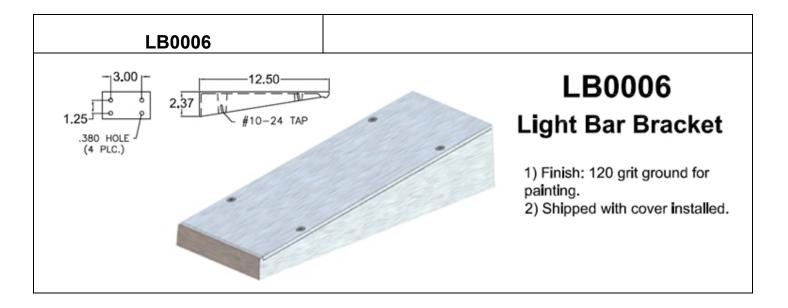


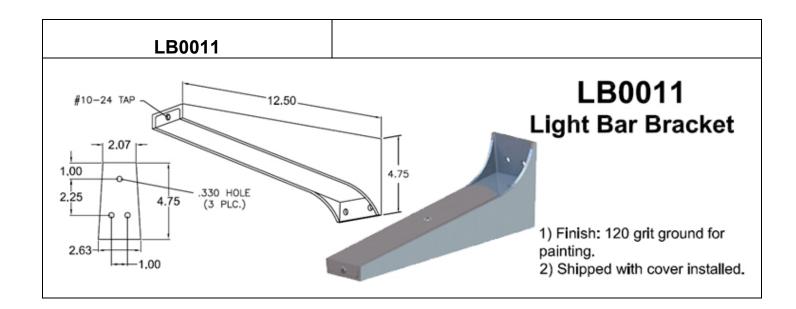


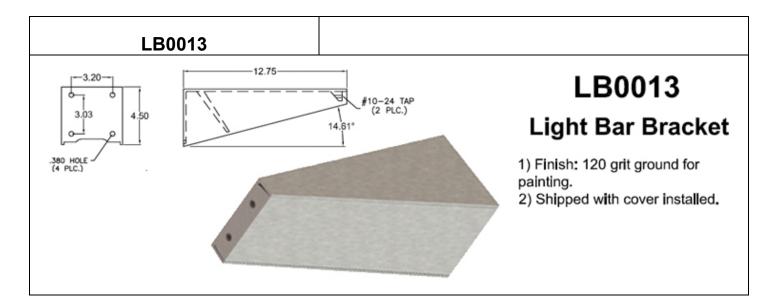

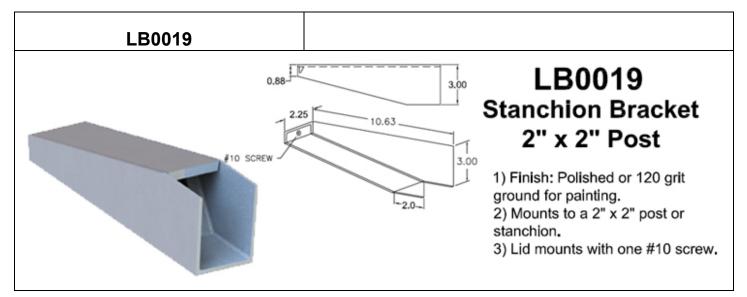


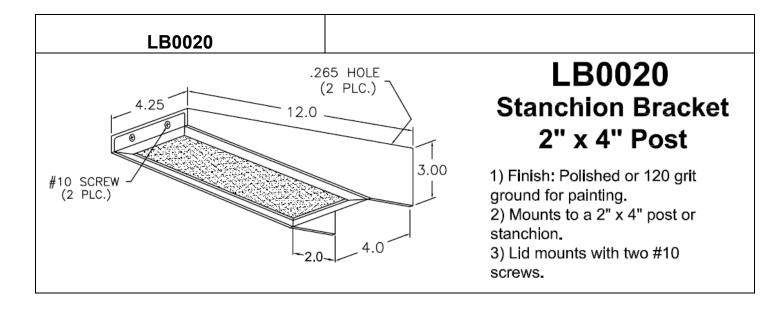

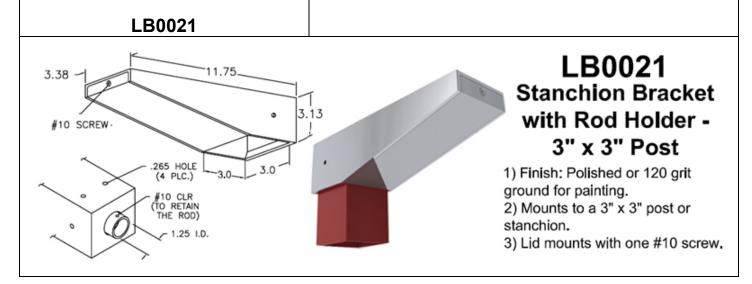

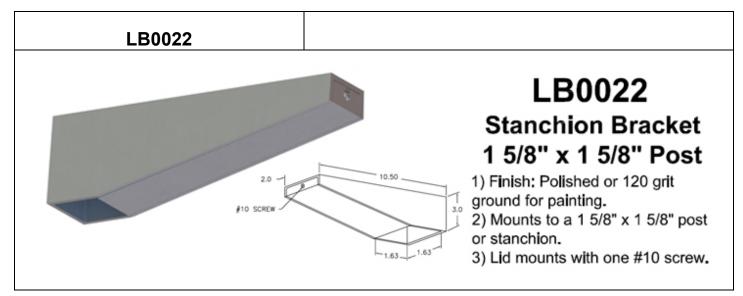





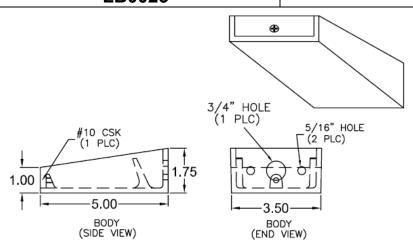



LB0023 Stanchion Bracket

 Finish: Polished or 120 grit ground for painting.
Lid mounts with one #10 screw.

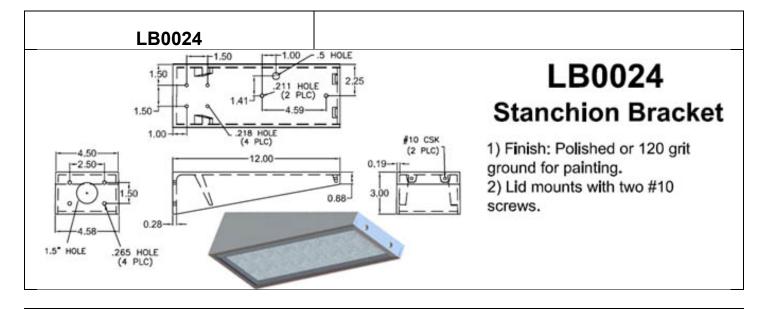

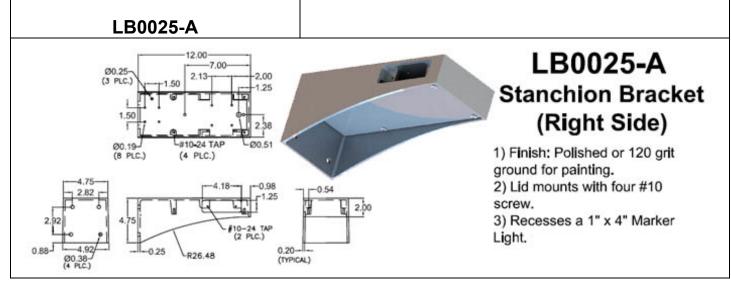

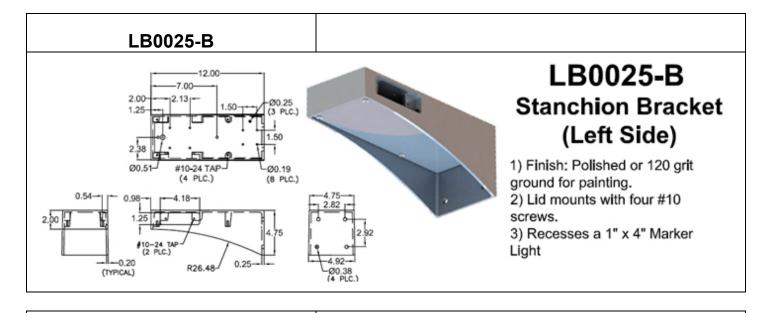


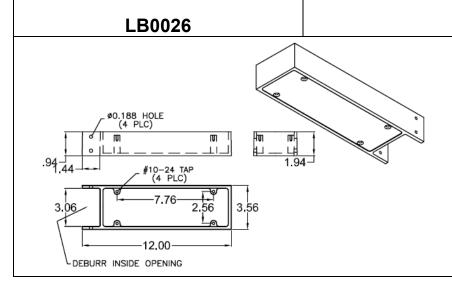



LB0026

Stanchion Bracket


 Finish: Polished or 120 grit ground for painting.
Lid mounts with four #10 screws.

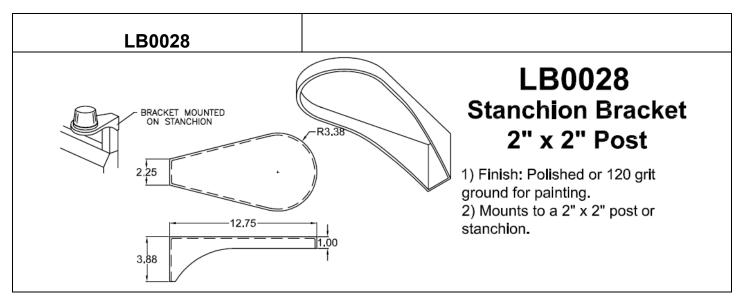

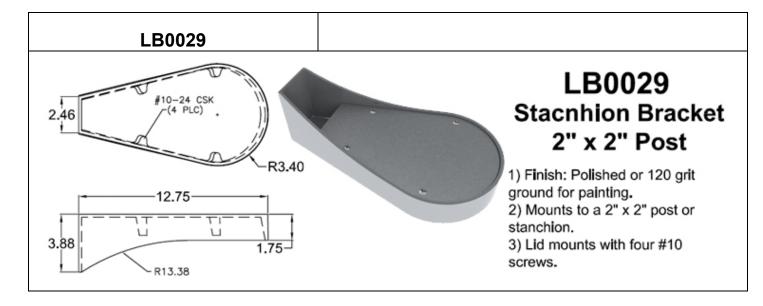

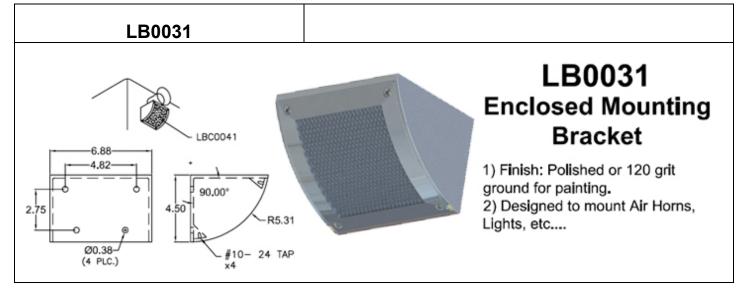


LB0032

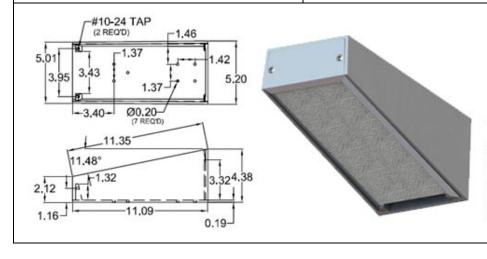


LB0032 Stanchion Bracket 3/8" x 3 1/2" Post


 Finish: Polished or 120 grit ground for painting.
Mounts to a 3/8" x 3 1/2" post or stanchion.
Lid mounts with two #10 screws.

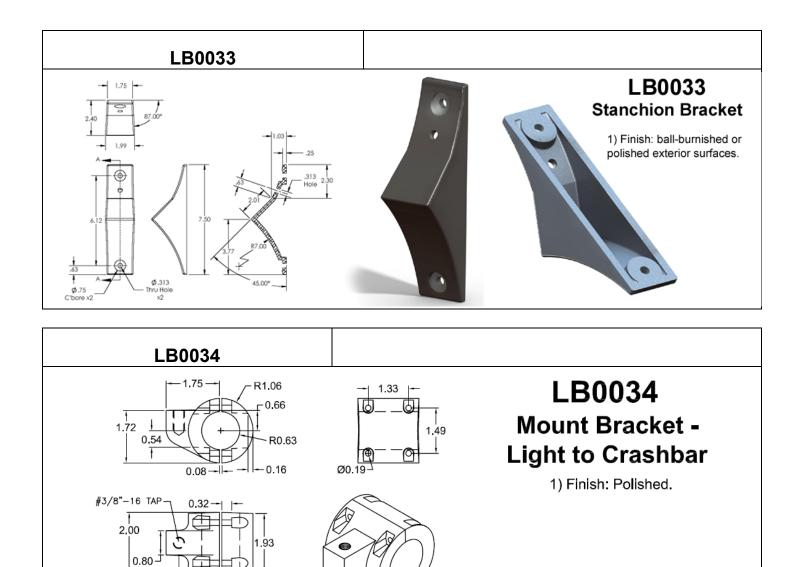



1.33


0.32

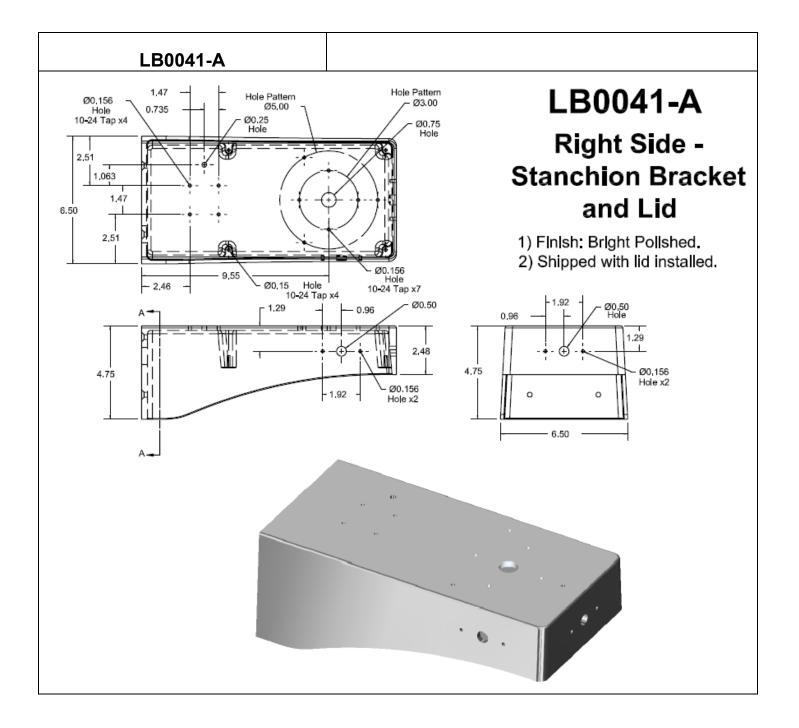


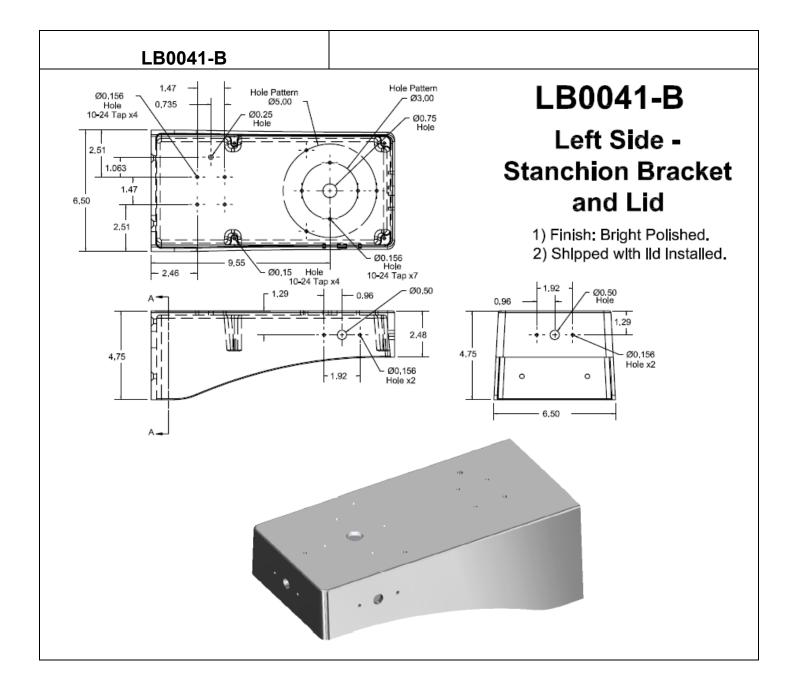


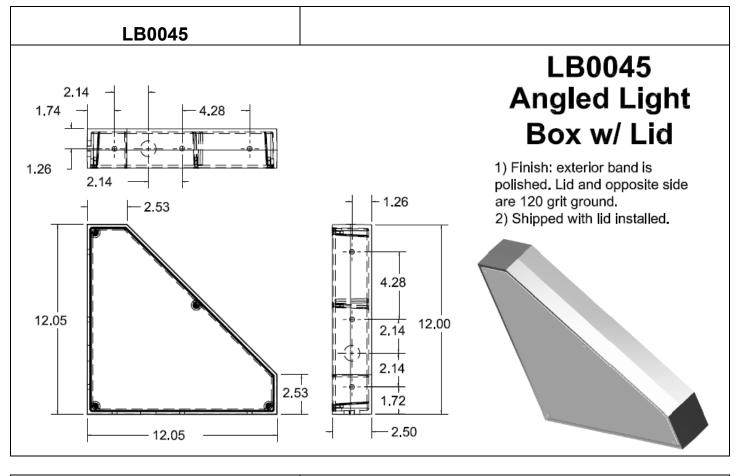


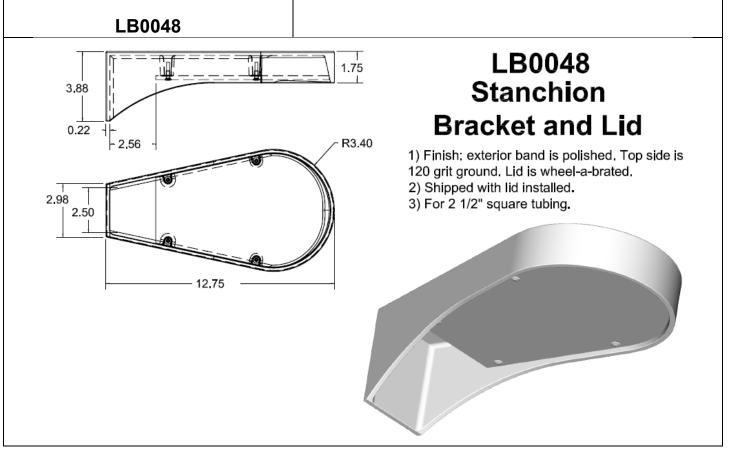

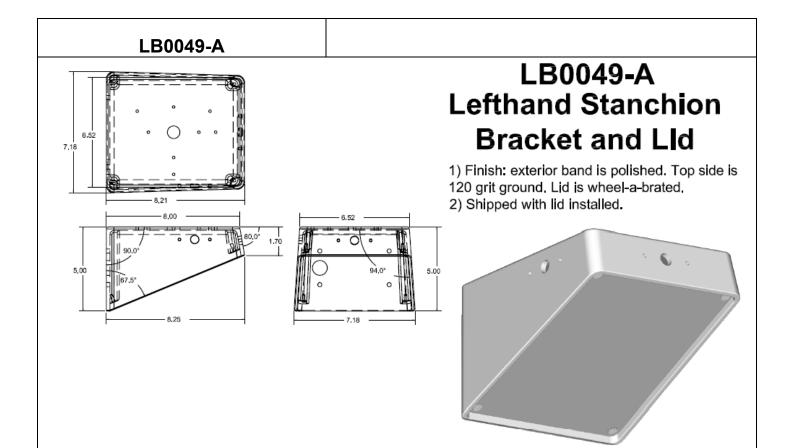

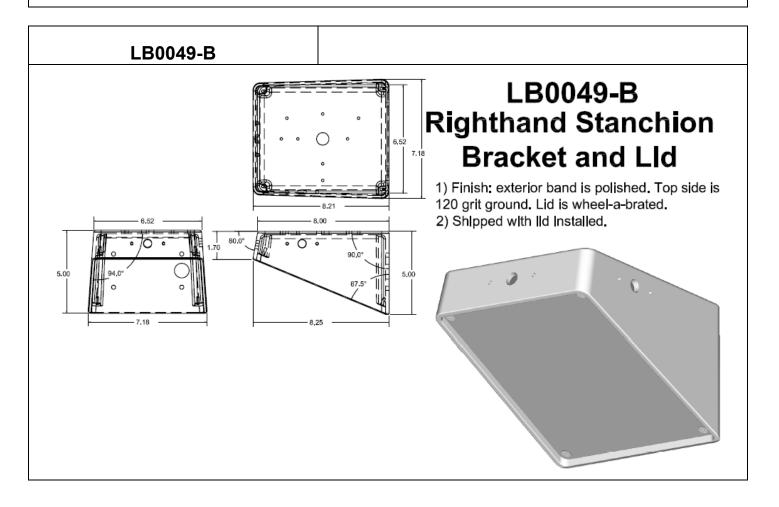

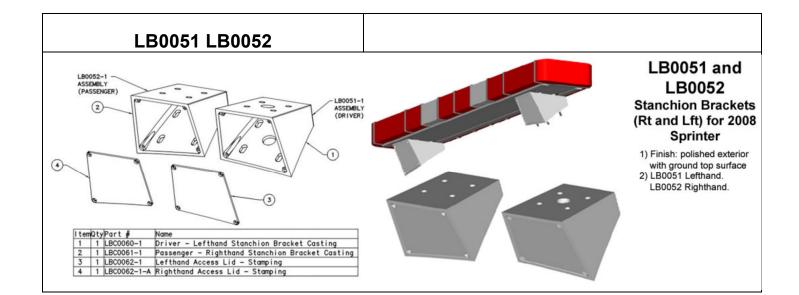

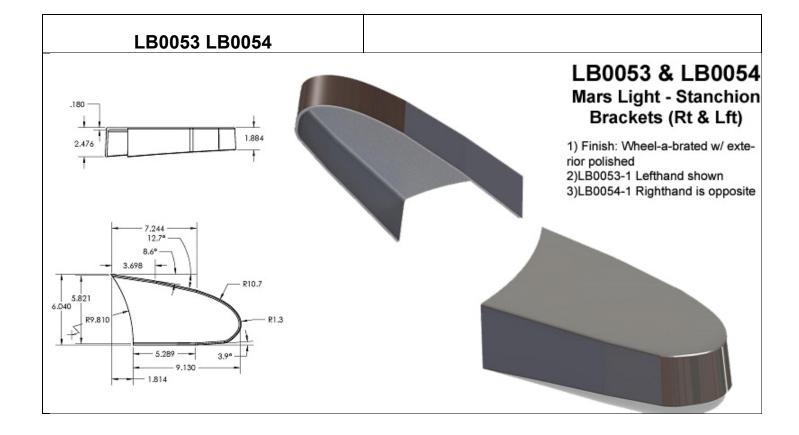

LB0057 LB0058

5

1

3

ITEM NO.	PART NUMBER	DESCRIPTION	BOM/QTY.
1	CR-FHM1 0.19- 24x0.5x0.5-S	AH0045 10-24 x .500" MS Phillips Flat Head Screw Stainless	8
2	LBC0060-1-B	Lefthand Stanchion Bracket Casting (2008 Sprinter and 2015 Ford Transit Cargo Van) Driver w/ wire hole	1
3	LBC0061-1-B	Righthand Stanchion Bracket Casting (2015 Ford Transit Cargo Van) Passenger	1
4	LBC0062-1	Lefthand Access Lid Stamping (2008 Sprinter or 2015 Ford Transit)	1
5	LBC0062-1-A	Righthand Access Lid Stamping (2008 Sprinter or 2015 Ford Transit)	1

LB0057 LB0058 Stanchion Bracket Assemblies with wire/mounting holes (2015 Ford Transit Cargo Van)

4

 Finish: Exterior surfaces polished.
For high or medium roof.

