



SAD SAP3807 "Through-the-Bumper" Outboard Mounts for 2010 Dodge 3500 and 2011 Dodge 4500



Installation Procedure

It is recommended that these instructions be completely read through first and referred to when performing maintenance and/or reinstallation of this product. FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS AND INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT OR VEHICLE AND/OR SERIOUS INJURY. CAUTION: SIREN CAN CAUSE DAMAGE TO UNPROTECTED EARS.

For Dodge 3500, Remove the Fog Light Cover Cap Filler Panel assemblies, located in the outboard "wings" of the bumper. The Siren Speaker Assemblies will locate centered on the factory bumper cut-outs. Use CT0227 P,D Cutting Templates to aid in marking the interior area to cut and enlarge the openings for the Siren Speaker Assemblies.



Cut and Enlarge the bumper opening. Position each siren speaker assembly into place and mark the centers of the four flange mounting holes.

Drill clearance holes, for the stainless 1/4" hardware (provided), through the bumper.

Mounting Hardware for each speaker (included):



2- 1/4-20 x 1 1/4" SS Phillips Oval Head screws.

2 - 1/4-20 x 1 1/2" SS Phillips Pan Head Screws

4- 1/4-20 Nylon Lock Nuts

4- 1/4" Lock washers.

Cutting Template

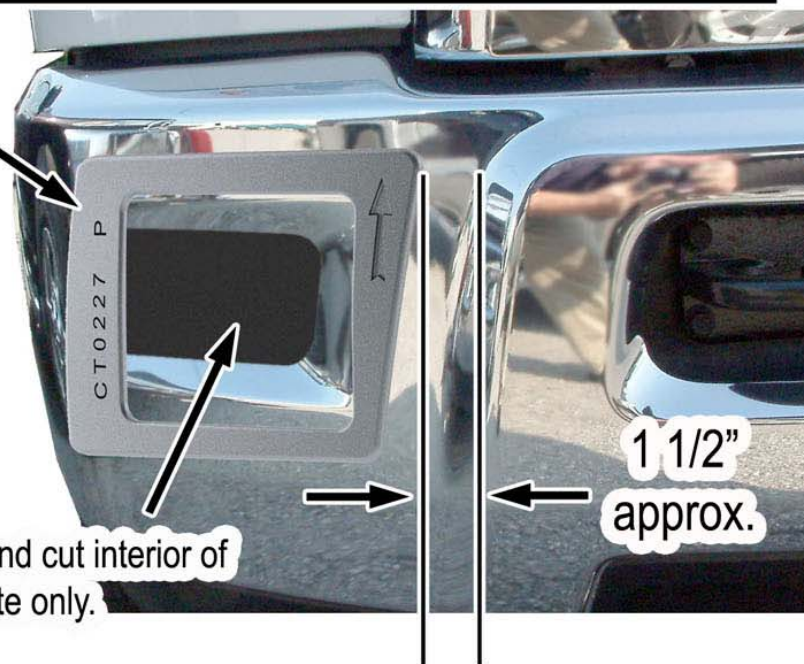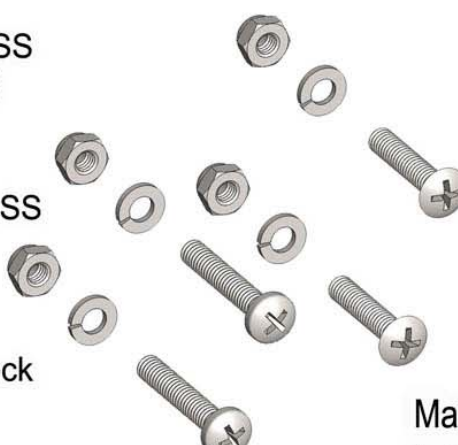



Passenger Side Speaker Placement



Re-position the speaker assemblies and install the 1/4-20 x 1 1/4 screws (x2), 1/4-20 x 1 1/2" screws (x2), lock washers and 1/4-20 nylon lock nuts.

Tighten all bolts and screws. Continue with the electrical connections as per their manufacturers directions.

Make sure that there is no interference with the integrity or operation of the vehicle and its components.

Be sure to include a periodic inspection of all bolts, screws, mounting hardware and components, along with the vehicles regular scheduled maintenance.